

Short-Set Foot Plate V3

Fitting Instructions

For Production & Performance Karts






CONTENTS

- A) Foot Plate
- B) Rail
- C) 2x Brackets
- D) Protection Patch
- E) 4x Long Allen Head Bolts with 4 washers and Nyloc nuts
- F) Long Hex Head bolt with PVC Cover & Nyloc nut
- G) 4x Allen Head bolts with Nyloc nuts
- H) 4mm Allen Key

Tools Required:

10mm Spanner or Socket

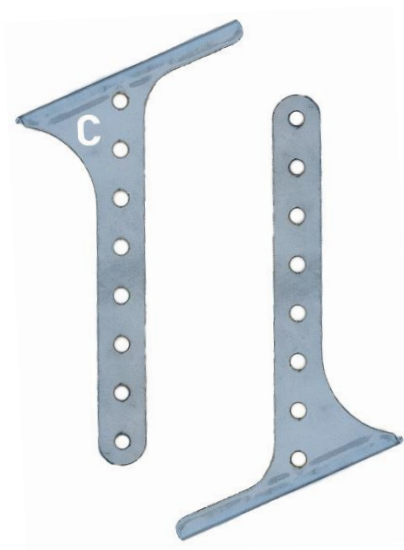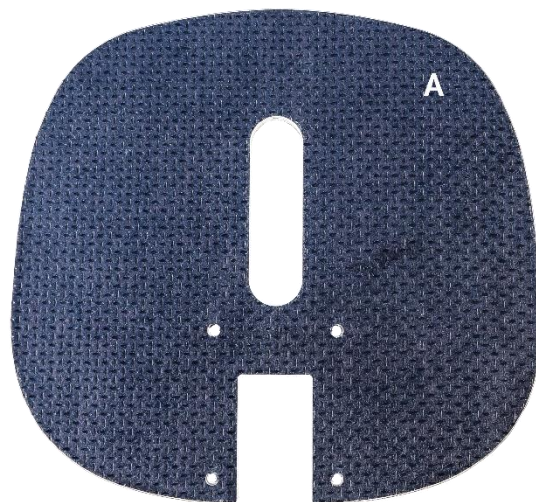

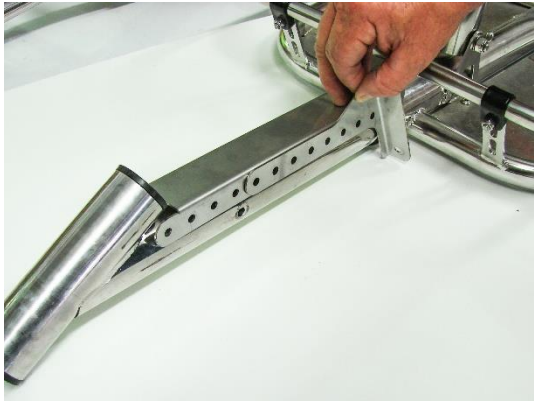

Remove the keel QR clamp and fit the Rail (B) onto the Blokart chassis, by slipping the back end of the rail under the Footbar and secure the back end of the rail with the Keel Tube QR Clamp. Take the left and right Brackets (C) and position to required leg length.



Note: the picture above shows the rear position and this shows the forward most position.




Once you have determined where you want the foot bar fitted, remove the keel QR bolt to assemble the foot plate. Push the long bolt sleeve through the Bracket, Rail, the PVC sleeve and out the other side


Note: The PVC Sleeve will rest on the chassis behind the steering head bush.



Assemble using the short bolts and nuts, finger tight.

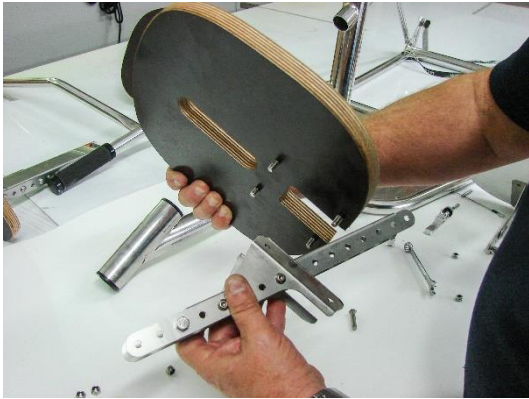

Slip the bolts through the Footplate and fit to the brackets before tightening the nuts

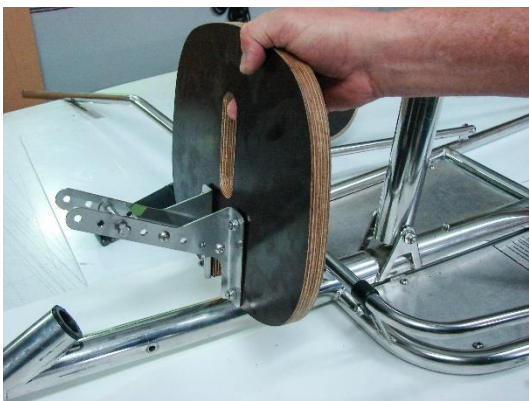

Fit the foot bar so the PVC sleeve locates behind the steering tube



Slide in the QR clamp and check for correct fit by sitting in the Blokart. When happy with length, tighten all bolts.



Fit self-adhesive protector strip on the steering tube.



When locking the Foot Plate in place, use the small nylon spacer between the rail and the QR boss on the Blokart.



This indicated the range of adjustment of the Foot Plate.



Comfort


Weighing only 1.1kg (2lbs 9oz) the Blokart Foot Plate enhances comfort allowing the sailor to perfectly position themselves and brace with their feet. It assists with weight distribution fore and aft of the Blokart and hiking-out. The ergonomically designed Foot Plate adjusts in 20mm increments to ensure a comfortable fit for all sailors.

Safety

The Foot Plate provides a safe position for your feet when your legs are too long for the standard Foot Bar on the Blokart chassis.



Assembly Instructions Short-Set Foot Plate with a Blokart Pod

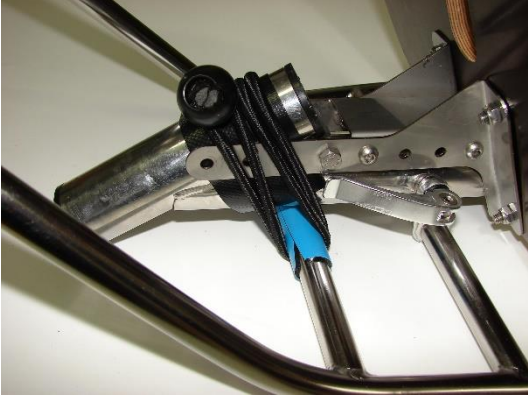

Note: Depending on the position of your Foot Plate, you may need to detach it at the Keel Tube QR Clamp and slide it back to fit a hand behind the plate to connect one or two wind screen domes.

1. Fit your Nose Frame as normal and tighten the Quick release clamp. You can fit the Pod bungee now or after fitting the Foot Plate.
2. Follow the normal Foot Plate assembly instructions and mount in the desired position.
3. If you have fitted the bungee just slip the bracket ends under the bungee before pushing Fitdown the back of the rail to align with the QR Clamp. Otherwise fit the bungee as normal.
4. Fit your Pod Skin and Windscreen.

