





The stainless steel Pod Protector Bar helps protect the nose of the Pod if/when the Blokart capsizes. Essential when sailing on hard surfaces.... call it insurance for your Pod!

Pod Protector Bar Fitting Instructions



With the quick release securing mechanism, the 'Roll-Bar' only takes a few extra minutes to fit when assembling your kart. Compatible with standard or Big front wheels.

1. Fit your Pod to your Kart as normal, but do not fit the windscreen.
2. Remove the R-Clip from the Rod and pull the Rod out of the Protector Bar.
3. Open the clamp on the Protector Bar by unscrewing the tri-knob anticlockwise.
4. Mount the Protector Bar to the bottom of the Kart's Head Tube, which protrudes out of the Pod, with the tabs for the Rod facing towards the rear of the Kart.
5. Clamp the Protector Bar. Use the Tri-knob to tighten securely
6. Heat the end of a screwdriver (or similar) over a flame then poke it through one tab to make a small hole in the Pod Skin.
7. Go to the other side of the Pod and repeat.
8. Push the Rod all the way through to the other tab.
9. Re-fit the R-Clip to hold the Rod in place.
10. Finally, remove the Pod Protector Bar, fit your windscreen and refit your Protector Bar again.
Note; the Rod can be tricky to fit without accessing the Pod cavity, but practice makes perfect.

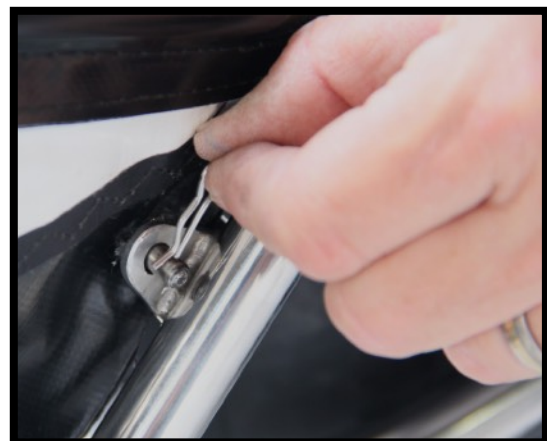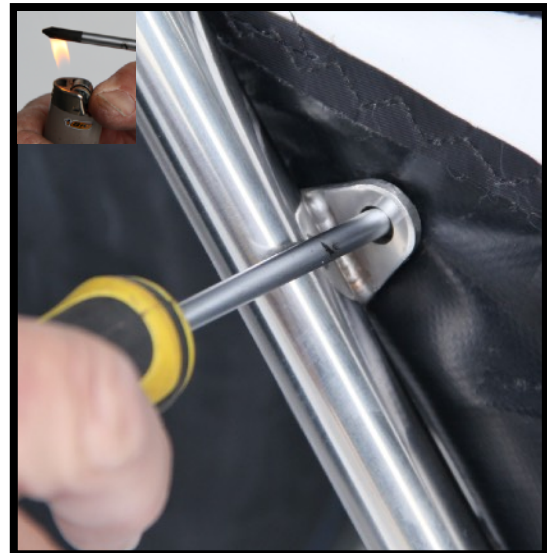

Note how the Pod Footbar is sandwiched between the Protector Bar and the Rod ensuring that the protector bar does not twist on impact exposing the nose of the Pod to damage.